



Accessories



台州市椒江柏森机械有限公司
Taizhou Bison Machinery Co.,Ltd

GASOLINE GENERATOR PARTS

BS950



 <p>1E45-1 曲轴箱 (左) Left Crank case</p>	 <p>1E45-2 曲轴箱 (右) Right Crank case</p>	 <p>1E45-3 曲轴 Crank shaft</p>	 <p>1E45-4 电机端盖 Rear cover</p>	 <p>1E45-5 气缸盖 Cylinder head</p>
 <p>1E45-6 滑套 Slip ring</p>	 <p>1E45-7 调速叉 Speed regulating fork</p>	 <p>1E45-8 活塞 Piston</p>	 <p>1E45-9 消声器 Muffler</p>	 <p>1E45-10 点火器 Ignitor</p>
 <p>1E45-11 T型插座 T Receptacle</p>	 <p>1E45-12 内螺纹油开关 Fuel control valve</p>	 <p>1E45-13 点火线圈 Ignitor coil</p>	 <p>1E45-14 过流保护器 Overload protector</p>	 <p>1E45-15 滤网 Fuel filter</p>
 <p>1E45-16 电容器 (12 μ F/13.5 μ F/16 μ F/12 μ F) Capacitor (12 μ F/13.5 μ F/16 μ F/12 μ F)</p>	 <p>1E45-17 油封 ϕ 20 Oil seal ϕ 20</p>	 <p>1E45-18 油封 ϕ 6 Oil seal ϕ 6</p>	 <p>1E45-19 防震脚 Shockproof foot</p>	
 <p>1E45-20 滚针轴承(小) Needle bearing (small)</p>	 <p>1E45-21 调速压簧 Governing spring</p>	 <p>1E45-22 调速拉杆 Governing rod</p>	 <p>1E45-23 深沟球轴承6004 Bearing 6004</p>	 <p>1E45-24 化油器 Carburetor</p>



1E45-25

长空滤器
Air cleaner (long)



1E45-26

(塑、铝)飞轮
(plastic, aluminium)Fly wheel



1E45-27

簧片阀
Air inlet valve mount



1E45-28

气缸体
Cylinder block



1E45-29

离心架
Stand



1E45-30

缸体垫片
Gasket (cylinder block)



1E45-31

调速臂
Speed regulating arm



1E45-32

垫片 (缸头)
Gasket (cylinder head)



1E45-33

消声器垫片
Gasket (muffler)



1E45-34

垫片 (化油器入口)
Gasket (carburetor inlet)



1E45-35

垫片 (化油器出口)
Gasket (carburetor outlet)



1E45-36

垫片 (簧片阀)
Gasket (reed valve)



1E45-37

活塞销
Piston pin



1E45-38

活塞销卡簧
Clip (piston pin)



1E45-39

滤芯
Filter element



1E45-40

调速弹簧
Spring (governor)



1E45-41

压线板
Cable cleat



1E45-42

调速轴
Governor gear shaft



1E45-43

固定片 (化油器)
Gasket (carburetor)



1E45-44

调速片
Speed gasket



1E45-45

火花塞
Spark plug



1E45-46

油箱手柄
Fuel tank handle



1E45-47

缸体导风罩
Air scooper cylinder



1E45-48

调速拉簧
Spring (governor)



1E45-49

压板
Hold-down plate



1E45-50

卷簧
Pawling spring (starter)



1E45-51

活塞环
Piston ring



1E45-52

轴承挡圈
Bearing circlip



1E45-53

卷轮
Drum wheel



1E45-54

棘爪
Bearing plate



1E45-55

拉绳
Rope



1E45-56

电压表
Voltmeter



1E45-57

转子
Rotor



1E45-58

定子
Stator



1E45-59

油箱
Fuel tank



1E45-60

油箱盖
Fuel tank cap



1E45-61

油杯
Oil filter assembly



1E45-62

高压包
High voltage set



1E45-63

压板螺丝
Screw



小套筒
Small sleeve



圆油位表
Oil gage



工具包
Tool



手柄
Handle starter



拉盘
Recoil starter assembly



叉型电源线
Power lead (X type)



T型电源线
Power lead (T type)



一体式点火器
Integral ignitor



纸垫片(缸头)
Paper gasket (cylinder head)



GASOLINE GENERATOR PARTS

BS1500A, BS1500T 1000W 汽油发电机配件




箱体
Crank case



箱盖(低)
Crankcase cover (low)



拉盘(塑)
Recoil starter assembly(plastic)

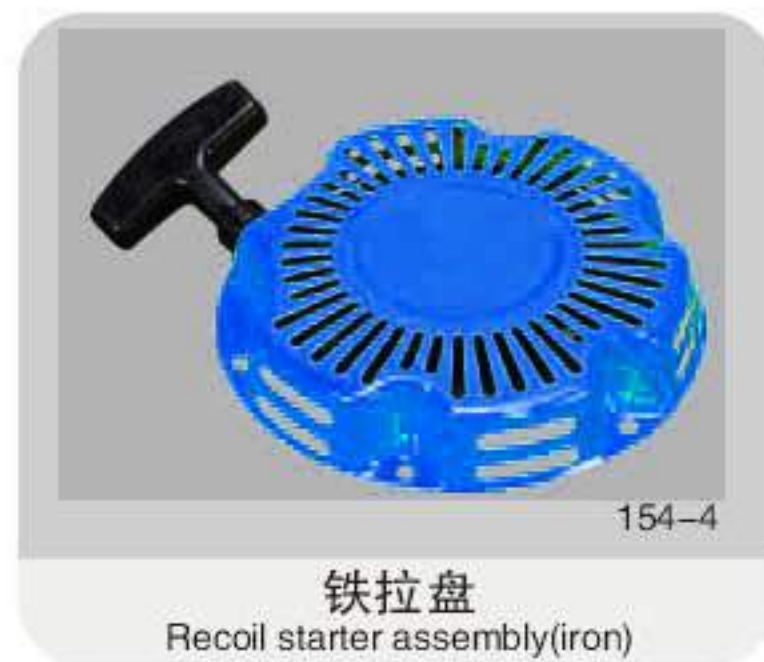

铁拉盘
Recoil starter assembly(iron)



气缸盖罩
Cylinder head cover



摇臂组件
Rocker arm



电机支架(无刷)
Bracket (without brushes)



前端盖
Crankcase cover (high)



导风罩
Wind scooper



曲轴
Crankshaft



气缸盖
Cylinder head



防震脚
Shockproof foot



空滤器
Air cleaner



化油器
Carburetor



铁凸轮轴
Camshaft assembly (iron)



活塞
Piston




启动盘(塑爪)
Starting tray





154-58

推杆
Push rod

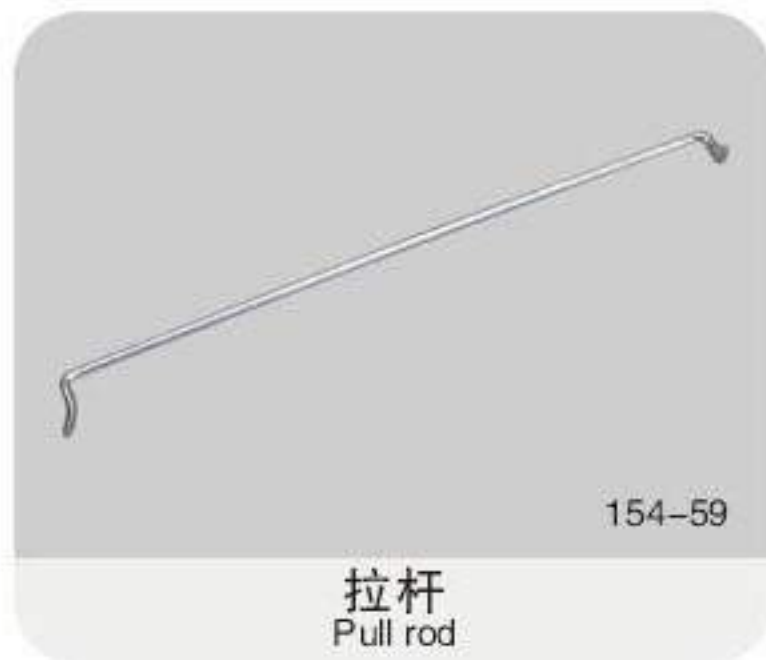

154-59

拉杆
Pull rod



154-60

塑料凸轮轴
Cam shaft (Plastic)



154-61

挡油板
Oil baffle plate



154-62

气缸垫片
Gasket(cylinder head)



154-63

调速轴卡簧
Clip(governor rod)



154-64

摆臂卡簧
Clip(governor arm shaft)



154-65

调速弹簧
Spring(spring regulation)



154-66

油箱
Fuel tank



154-67

风扇罩
Fan case



154-68

转子
Rotor



154-69

定子
Stator



154-70

箱体高盖
Crank case cover (high)



154-71

滑套
Governor slider

GASOLINE GENERATOR PARTS **BS2500DC, BS2500B, BS2500Y, BSWP30** **GASOLINE PUMP PARTS** 汽油机水泵配件 汽油发电机配件




168-1

箱体
Crank case



168-2

气缸盖
Cylinder head

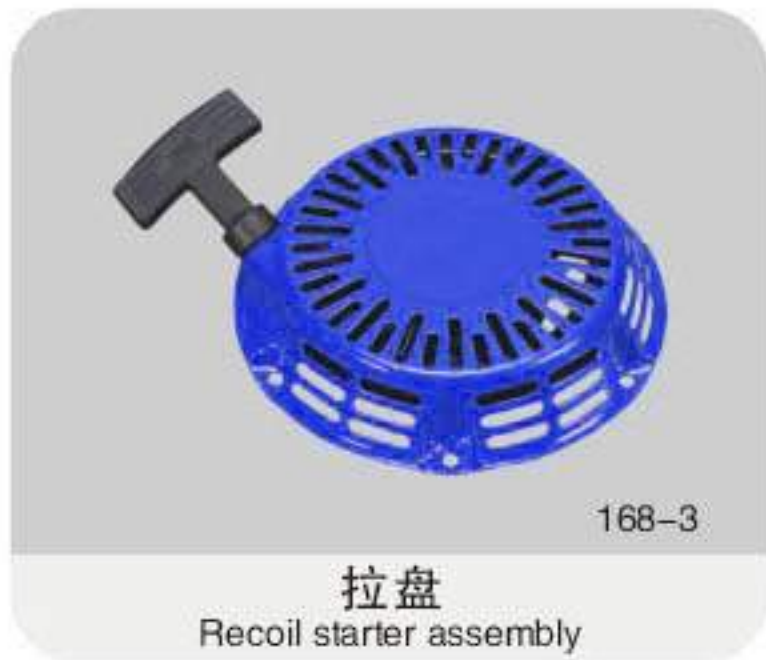

168-3

拉盘
Recoil starter assembly



168-4

箱盖(高)
Crank case cover (high)





168-5
拉盘 (塑料)
Recoil starter assembly(plastic)

168-6
拉盘 (铁)
Recoil starter assembly(iron)

168-7
电动风扇罩
Fan cover(electric)

168-8
手动风扇罩
Fan cover(recoil)

168-9
消声器支架
bracket(muffler)

168-10
前端盖
Crankcase cover (front)

168-11
箱盖(低)
Crankcase cover (low)

168-12
气缸盖罩
Cylinder head cover

168-13
电机支架(有刷)
Bracket (with brushes)

168-14
放大器
Oil amplifier

168-15
导风罩
Air scooper

168-16
马达
Motor

168-17
消声器
Muffler

168-18
消声器 (新款)
Muffler(New Model)

168-19
调压器 (铝壳)
Avr(Aluminum)

168-20
凸轮轴总成 (塑料)
Camshaft assembly(Plastic)

168-21
凸轮轴总成 (铁)
Camshaft assembly(iron)

168-22
曲轴总成 (电机)
Crankshaft

168-23
机油报警器
Oil alert

168-24
水泵油嘴
Nozzle tip (pump)

168-25
涡壳
Swirlingshell

168-26
叶轮
Impeller

168-27
高压包
High voltage set

168-28
调压器 (塑料)
Avr(Plastic)

168-29
电启动飞轮(不带内磁)
fly wheel electric

168-30
卡箍
Clip

168-31
出水口
Water outlet

168-32
电机空滤器
Air cleaner

168-33
动力空滤器
Engine air cleaner

168-34
调速臂
Speed-regulate arm

168-35
活塞
Piston

168-36
外螺纹油开关
fuel oil valve

168-37
机油标尺组件
Oil gauge set

168-38
冷却风扇
cooling fan

168-39
接线柱
Terminal

168-40
起动轂 (2500塑爪)
Staring pulley (2500)

168-41
油箱盖
Engine fuel tank cap

168-42
挺柱
Valve lifter

168-43
滑套
Governor slider

168-44
箱体垫片
Gasket (cylinder head)





168-86
启动盘 (铁爪)
Starter pulley(iron)

168-87
启动盘 (塑爪)
Starter pulley(Plastic)

168-88
继电器
Relay

168-89
防震脚
Shockproof foot

168-90
电瓶 7 AH
Battery 7 AH

168-91
轮子
Wheel

168-92
电机后罩
Rear cover

168-93
轮子轴
Wheel shaft

168-94
方油位表
Fuel level gauge

168-95
塑料压板
Hold-down plate(Plastic)

168-96
压板 (铁)
Hold-down plate(iron)

168-97
压板螺丝
Screw

168-98
塑料挡块
Plastic block

168-99
压板卡簧
Clip

168-100
电桥
Electrical bridge

168-101
卷簧
Pawling spring (starter)

168-102
拉绳
Rope

168-103
卷轮
Drum wheel

168-104
进出水口垫片
Gasket of water inlet / outlet

168-105
进水口
Water inlet

168-106
气门弹簧
Spring (valve)

168-107
导向板
Plate push rod guide

168-108
隔热板
Heat insulation

168-109
油封
Oil seal

168-110
进水滤网
Inlet strainer

168-111
化油器垫片
Gasket (carburetor)

168-112
空滤器垫片
Gasket (air cleaner)

168-113
出水口密封垫片
Gasket(water outlet)

168-114
汽缸盖罩垫片
Gasket(cylinder cover)

168-115
水泵化油器
Pumps Carburetor

168-116
进出水口接口
Joint(water inlet outlet)

168-117
堵塞
Blocker

168-118
泵体座
Pump seat

168-119
动力油箱
Engine fuel tank

168-120
进出水口接头
Joint(water inlet outlet)

168-121

168-122

168-123

水封
Water envelop

168-124
水封垫片
Gasket(water envelop)

168-125
水泵调速架
Control assembly

168-126
进出水口紧固螺丝
Fixing screws of water inlet / outlet



GASOLINE GENERATOR PARTS

BS2500YM

汽油发电机配件





GASOLINE GENERATOR PARTS

BS2500SM 2000W / BS3500VT 2500W

汽油发电机配件



箱体
Crank case



气缸盖
Cylinder head



箱盖(高)
Crankcase cover (high)



箱盖(低)
Crankcase cover (low)



电机支架
Bracket



马达
Motor



活塞
Piston



气缸盖罩
Cylinder head cover



卷轮
Drum wheel



电机风叶
Motor fan



阻风门调节泵
Governing pump (choke valve)



机油报警器
Oil alert



拉绳
Rope



拉手
Handle starter



气门油封
Valve oil seal



定位销
Location pin



调速弹簧
Spring (governor)



活塞销卡簧
Clip (piston pin)



调速轴卡圈
Closing ring (governor rod)



挡块
Chock black



挡块弹簧
Block spring



压板螺丝
screw



电瓶
battery





188-64

导向板 (带塑料)
Plate push rod guide with plastic



188-65

空滤器
Air cleaner



188-66

充电线圈
Charging coil



188-67

活塞环总成
Piston ring set



188-68

平衡轴
Balance shaft



188-69

高压包
High voltage set



188-70

摇臂
Rocker arm



188-71

摇臂螺栓
Rocker arm bolt



188-72

锁紧螺母
Nut



188-73

顶帽
Top cap



188-74

摆杆卡簧
Clip(governor arm shaft)



188-75

弯通气管
Ventiduct



188-76

盖盘
Drive plate



188-77

调速轴
Governor rod



188-78

火花塞
Spark plug



188-79

气门弹簧
Spring (valve)



188-80

微调拉簧
Spring (pull rod)



188-81

调速拉杆
Pull rod



188-82

电机消音器
Motor muffler




188-83

转子
Rotor



188-84

定子
Stator

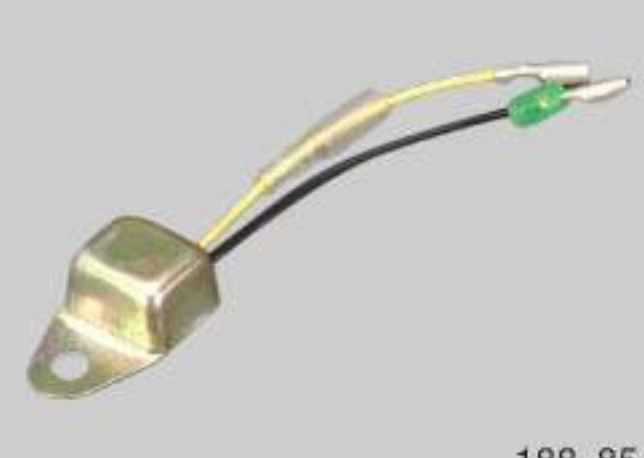

188-85

机油放大器
Oil protector



188-86

挺柱
Valve lifter



188-87

调速臂
Governor arm



188-88

卷簧
Pawling spring starter



188-89

起动机总成
Recoil starter assembly



188-90

网条
Steel mesh



188-91

压线板
Pressing line plate



188-92

风扇罩
Fan case



188-94

防震脚
Shockproof foot



188-95

消声器支架
Bracket(muffler)



188-96

螺杆垫圈
Screw washer



188-97

188水泵消清器
Water pump muffler



188-93

油箱
Fuel tank



DIESEL GENERATOR PARTS

BS3500DSE, BS3500DCE 3000W

柴油发电机配件



 186-1 箱体 Crank case	 186-2 箱盖(低) Crankcase cover(low)	 186-3 油门支架(动力) Bracket(accelerograph)	 186-4 气缸盖罩(FA) Cylinder cover	 186-5 进气管 (186) Intake pipe
 186-6 空滤器 (186) Air cleaner	 186-7 空滤器 (186) 静音 Air cleaner(Silent)	 186-8 消声器(静音) Muffler(Silent)	 186-9 活塞 (186) Piston 186	 186-10 起动轂 (186) Starter pulley
 186-11 滤芯 (186) Filter element	 186-12 平衡轴 Balance shaft	 186-13 拉盘 Recoil starter assembly	 186-14 消声器(带架) Muffler	 186-15 曲轴 Crankshaft
 186-16 滤芯(170、178) Filter element(170、178)	 186-17 飞轮齿圈 Gear(fly wheel)	 186-18 柴油滤 (带架) Fuel filter (with bracket)	 186-19 柴油滤 (静音) Fuel filter (silent)	 186-20 稳压器 Regulator
 186-21 曲轴瓦 Main bearing shell	 186-22 机油报警器(双极) Oil alert (double pole)	 186-23 飞轮发电机 Magneto	 186-24 油泵带电磁阀 Oil pump with electromagnetic valve	 186-25 气缸盖垫片(0.1-0.5mm) Gasket(cylinder cover)





186-66
平衡轴 (170)
Balance shaft(170)

186-67
空滤器(170、178)
Air cleaner(170、178)

186-68
调速连杆拉簧
Speed adjusting spring

186-69
缸盖螺母 (厚) (薄)
Nut(cylinder cover)

186-70
减压回位弹簧
Back spring

186-71
消声器 (178带架)
Muffler(178 with frame)

186-72
飞轮
Fly wheel

186-73
底盘轮子
Wheel

186-74
油嘴(FA)
Oil nozzle

186-75
风扇罩密封条
Seal strip (fan cover)

186-76
箱体垫片(铝) (186)
Aluminum Gasket(crank case)

186-77
O型圈
O ring

186-78
气缸盖罩(170、178)
Cylinder cover(170、178)

186-79
摇臂总成 (186)
Rocker arm

186-128
机油报警器(单极)
Oil alert (monopole)

186-81
活塞销
Piston pin

186-82
挺柱
Valve lifter

186-83
油箱开关
Oil switch of fuel tank

186-84
动力油箱支架
Engine fuel tank bracket

186-85
起动机
Starting motor

186-86
连杆瓦
Pull rod case

186-87
油咀(170、178)
Oil nozzle(170、178)

186-88
观察孔垫片
Gasket

186-89
摇臂支架
Rocker arm bracket

186-90
摇臂组件
Rocker arm

186-91
高压油管(静音186)
High pressure oil pipe

186-92
进排气门
Intake exhaust valve

186-93
油泵(170、178)
Oil pump(170、178)

186-94
导风罩
Wind scooper(170、178)

186-95
活塞186
Piston 186

186-96
气门弹簧上座
Valve spring retainer(up)

186-97
顶帽
Top cap

186-98
气门锁夹
Valve lock clamp

186-99
导风罩 (186)
Air scooper

186-100
风扇罩
Fan cover

186-101
油箱
Fuel tank

186-102
防护罩
Protection cover

186-103
转子
Rotor


186-104
定子
Stator

186-105
工具包
Tool



186-128

箱体垫片(170)铝
Aluminum Gasket(crank case)

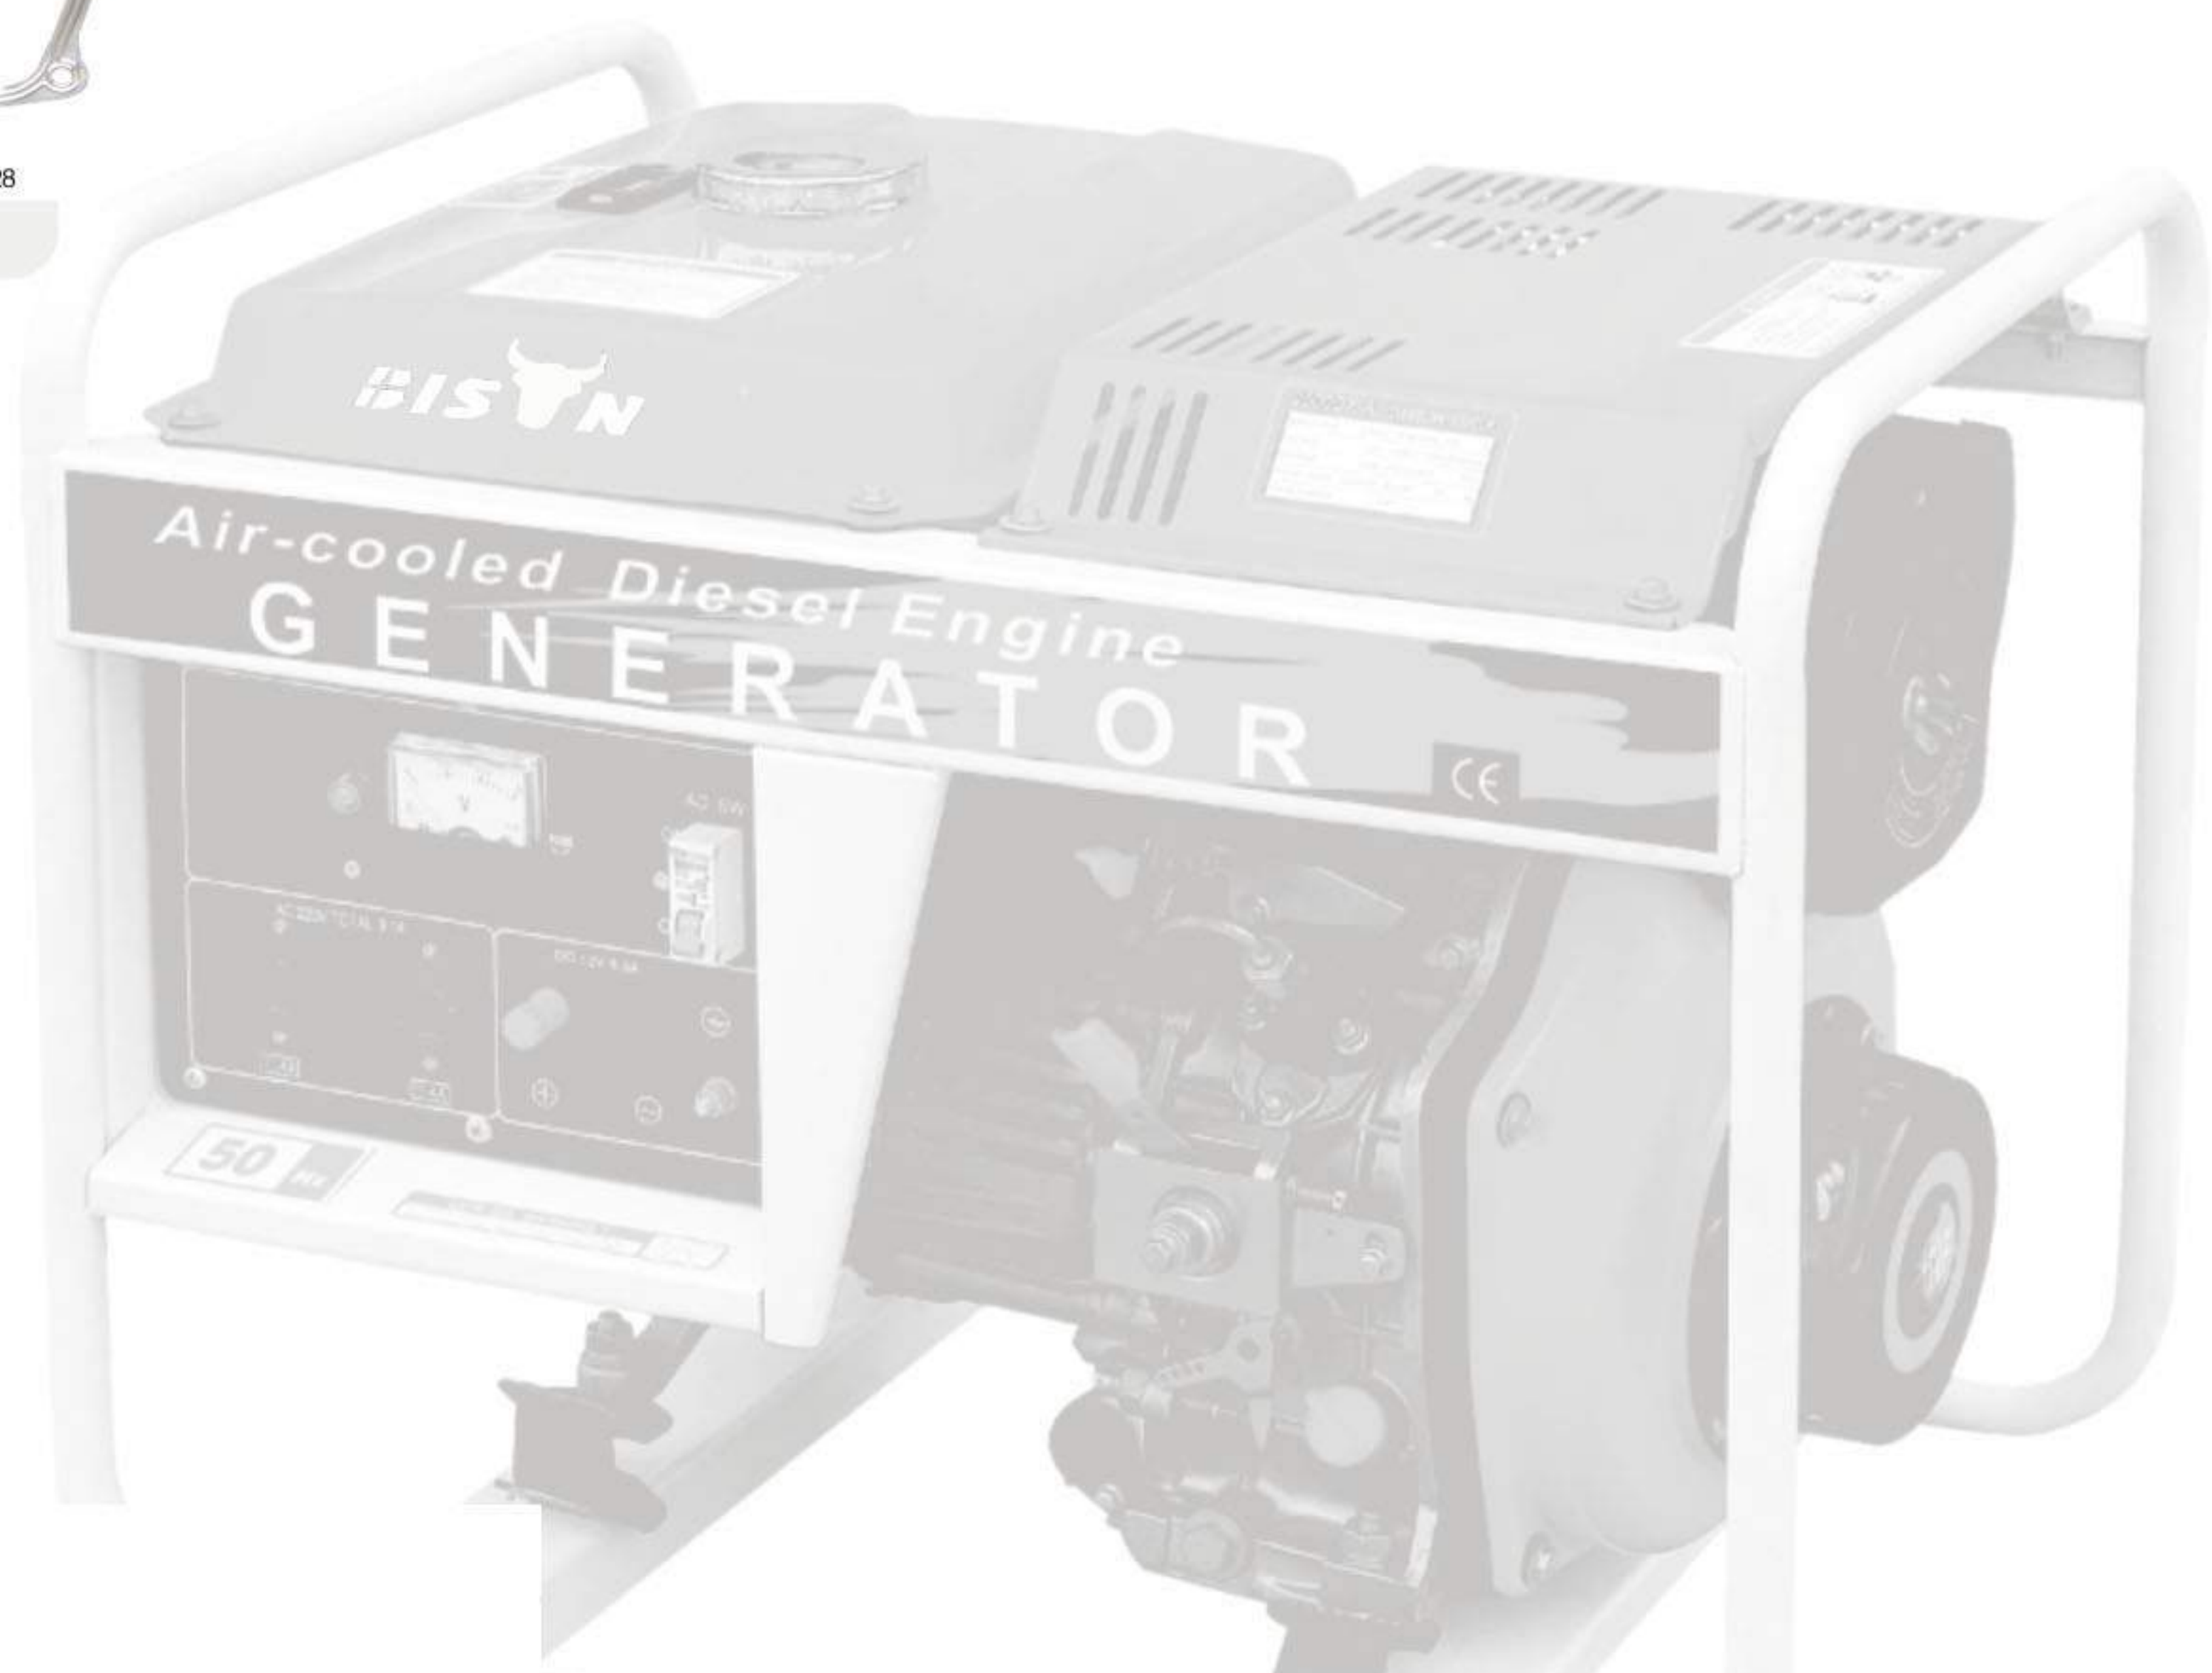



GASOLINE GENERATOR PARTS

汽油发电机面板配件

 1P断路器 1P breaker MB-1	 3P断路器 3P breaker MB-2	 工业连接器插座(5孔) Pluscon receptacle(5 holes) MB-3	 工业连接插头(5孔) Pluscon plug(5 holes) MB-4	 50断路器 50 breaker MB-5	
 澳式插座 Australian receptacle MB-6	 国标三极插头 Grade III plug MB-7	 美式4孔插头 American 4-pin plug MB-8	 欧式插座 European receptacle MB-9	 30断路器 30 breaker MB-10	
 美式小插座 American receptacle (small) MB-11	 三相电压表 Three phase voltmeter MB-12	 欧式插头 European plug MB-13	 柴油机电门锁 Diesel generator electric door lock MB-14	 汽油机电门锁6线 Gasoline generator electric door lock(6 wires) MB-15	
 汽油机电门锁4线 Gasoline generator electric door lock(4 wires) MB-16	 12V保护器 12V Protector MB-17	 钮子开关9脚 Toggle switch 9 feet MB-18	 钮子开关6脚 Toggle switch 6 feet MB-19	 船形熄火开关 Boat-shaped on-off switch MB-20	
 整流器 Rectifier MB-21	 美式插头 American plug MB-22	 单相电压表 Single phase voltmeter MB-23	 小美式插头 American plug (small) MB-24	 国标三极插座 Grade III receptacle MB-25	
 美式插座 American receptacle MB-26	 英式插头 English plug MB-27	 水泵熄火开关 Water pump on-off switch MB-28	 保护器 Overload protector MB-29	 熄火开关 on-off switch MB-30	
 多功能插座 Multi-function receptacle MB-31	 接线柱 Terminal (black, red) MB-32	 950船形熄火开关 950 boat-shaped on-off switch MB-33	 V型插 V-shaped plug MB-34	 日式插座 Japanese receptacle MB-35	 日式插头 Japanese plug MB-36

www.bisonpower.net



FACEBOOK



BISON WEB



WECHAT

台州市椒江柏森机械有限公司

TAIZHOU BISON MACHINERY CO., LTD

公司地址：浙江省台州市椒江区方远电商创业园D幢二楼

电话：0086-576-88205202

传真：0086-576-88017986

邮箱：coco@bisonpower.net

Add: 2/F, Build.D, Fangyuan Business Park,
No.155 West Taihe Road, Jiaojiang,
Taizhou City, Zhejiang Province, China

Tel: 0086-576-88205202

Fax: 0086-576-88017986

E-mail:coco@bisonpower.net